



19

JINRONG WATCH

INSTRUCTIONS

JR-189

NOTICE

 
- Don't open the cover by yourself.
- This watch waterresist 3M(Vacuum Test),don't use the Button when the watch in the water inside.
- If there is water smoke or drips inside the watchcase,ask approved specialist to disassembly and repair at once, or the inner parts may damage caused by corrosion.
- Avoid being a strong vibration, electronic forms can be bearing common shock, such as gravity suffered the impact of brutal use of or fall in Gaine.
- Don't use it in strong electric field, static or high cycle environment.
- Don't use it in broilling or freezing environment.
- Rinse watch surface with soft cloth and clear watch,don't use chemicals,As the case, strap its own characteristics, combined with humidity and other climate the table in use for some time after the appearance of colors may be subject to change (which belongs to the normal category).
- Prolonged use of colorful Lights will consume large amount of energy.
- When not in use this watch, please place it in a dry place.
- Please read this instruction carefully before using this watch.
- Product function and appearance in order to prevail in kind

FUNCTION AND SPECIFICATION

- Standard display:time, minute, second, month, date and week
- 12/24hour
- LED colorful Lights
- Separate stage timekeeping function
- Alarm and hourly chime function
- Smoke function
- Use temperature: 5℃-35℃
- Degree of accuracy: at normal temperature 30seconds one month
- Temperature: 0-50℃
- Life of battery:able to supply power for 18 months under the following situation:
one illumination per day

— (1) —

OPERATION

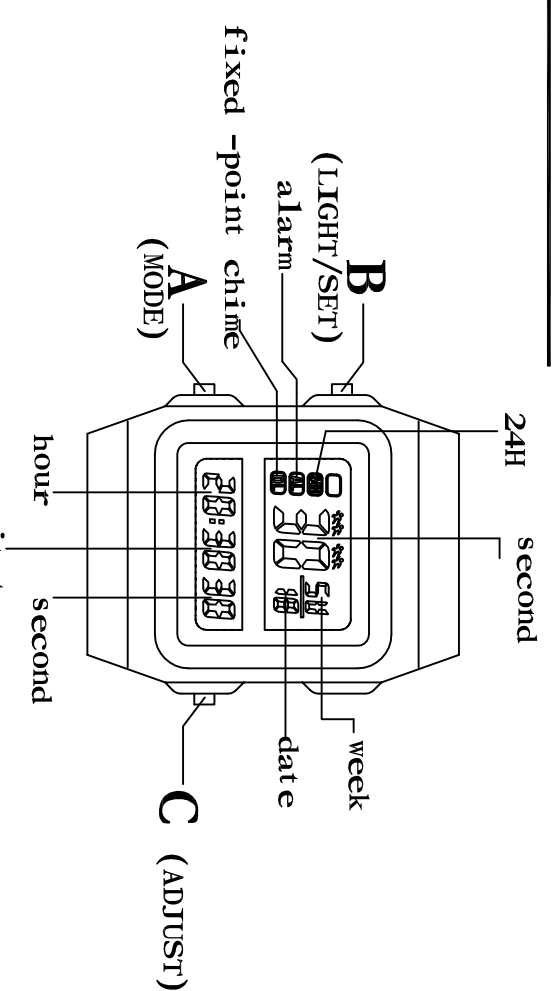

Normal display sketch map

Button explain

 
- A (MODE) --- function select button
- B (LIGHT/SET) --- LED Light ALARM ON/OFF and 12/24 format, stop and start button
- C (ADJUST) --- can change every digit button

HOW TO USE LIGHT

In any display mode press B button lit LED Lights, Press and hold down the colored Lights can be continuously synchronized output


HOW TO CHANGE 12/24 FORMAT

In normal display press C button.

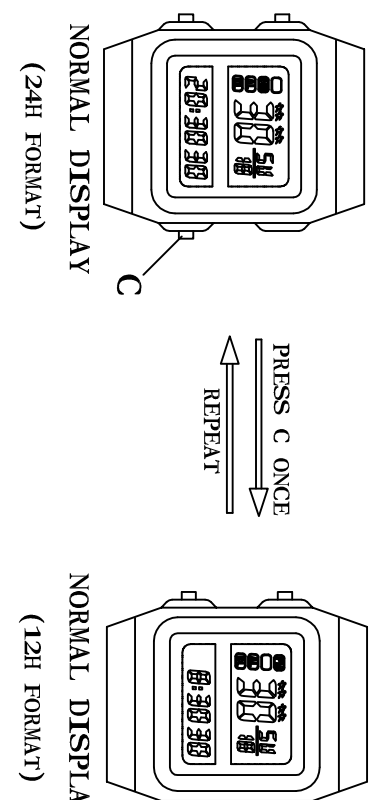


— (2) —

 HOW TO SET ALARM

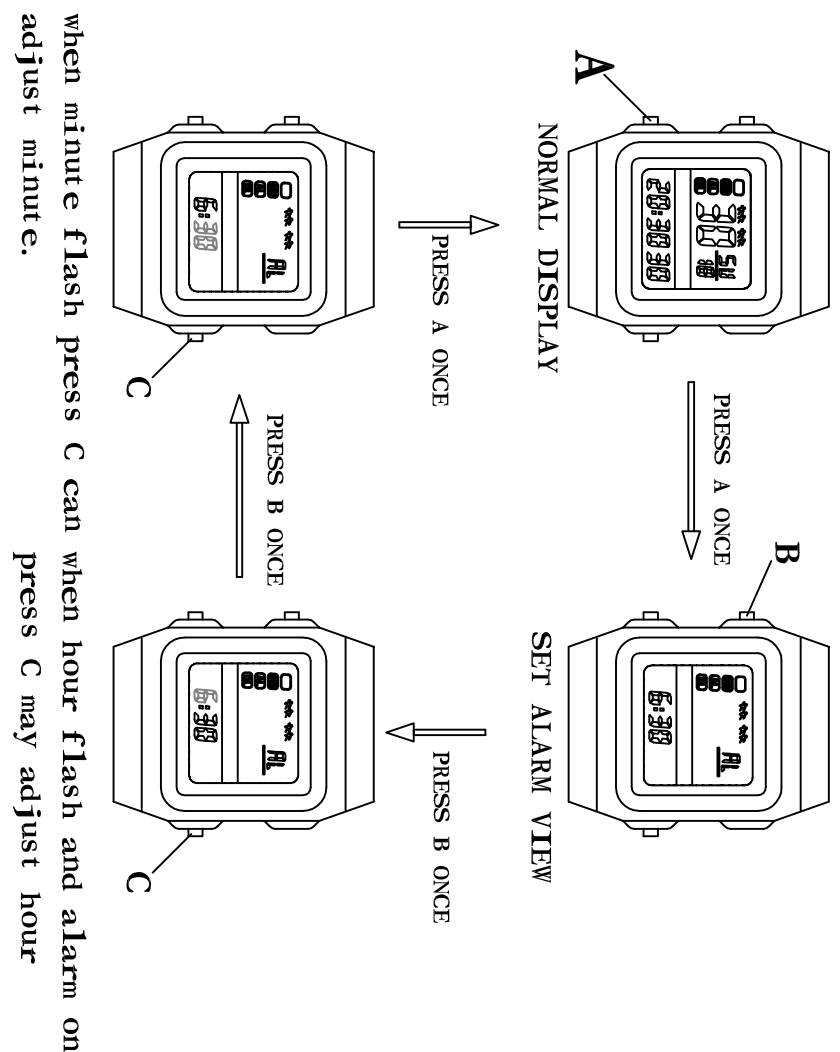


 HOW TO ON/OFF THE ALARM AND HOURLY CHIME

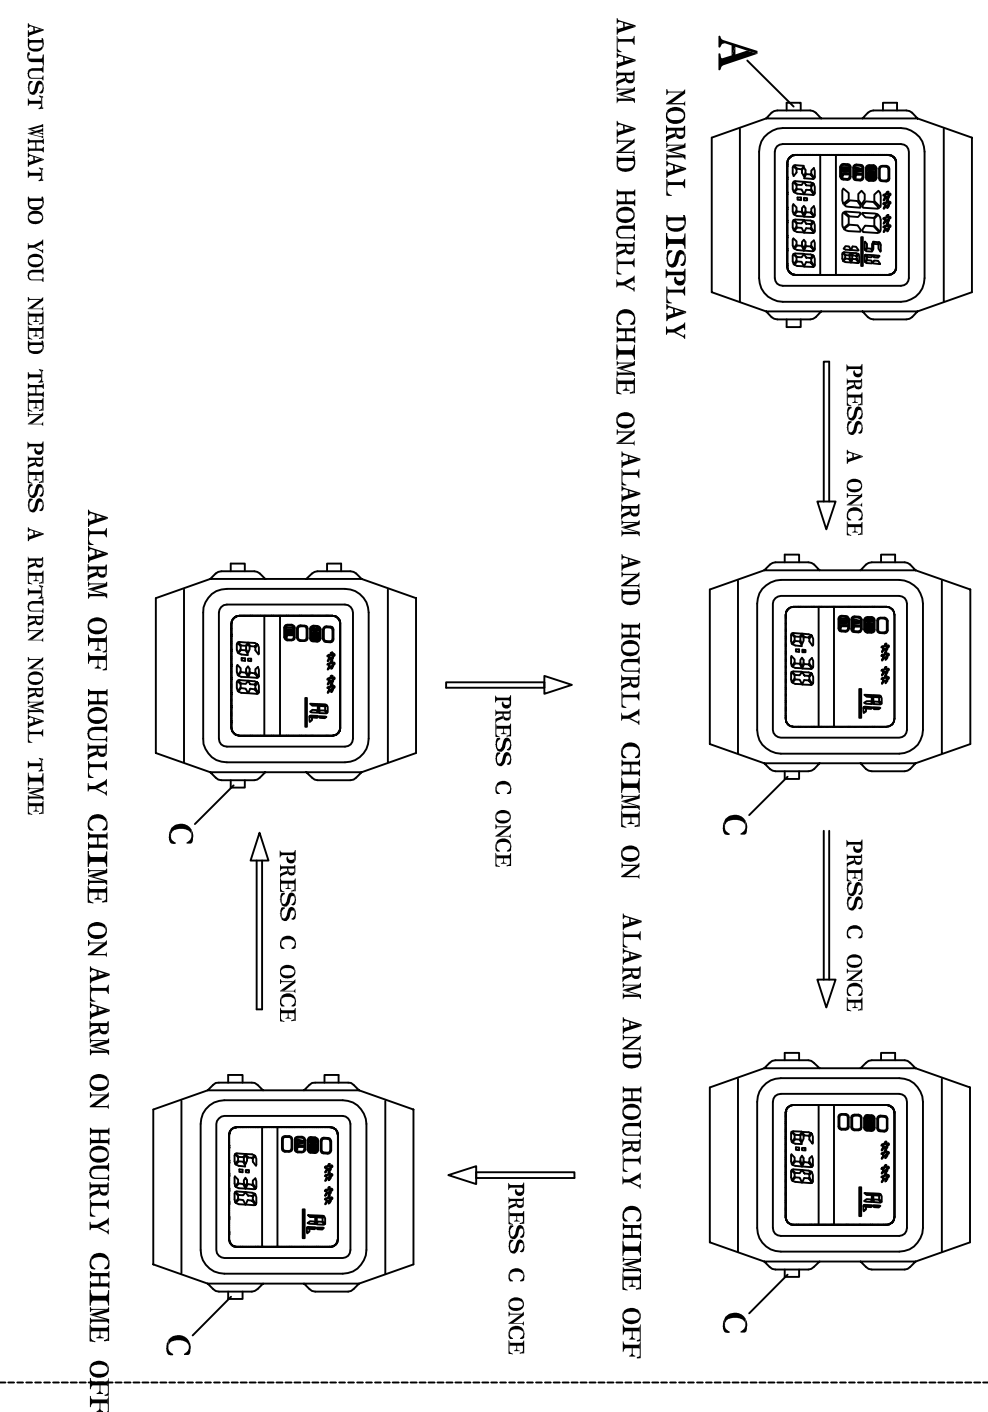


— (3) —

 HOW TO USE THE CHRONOGRAPH

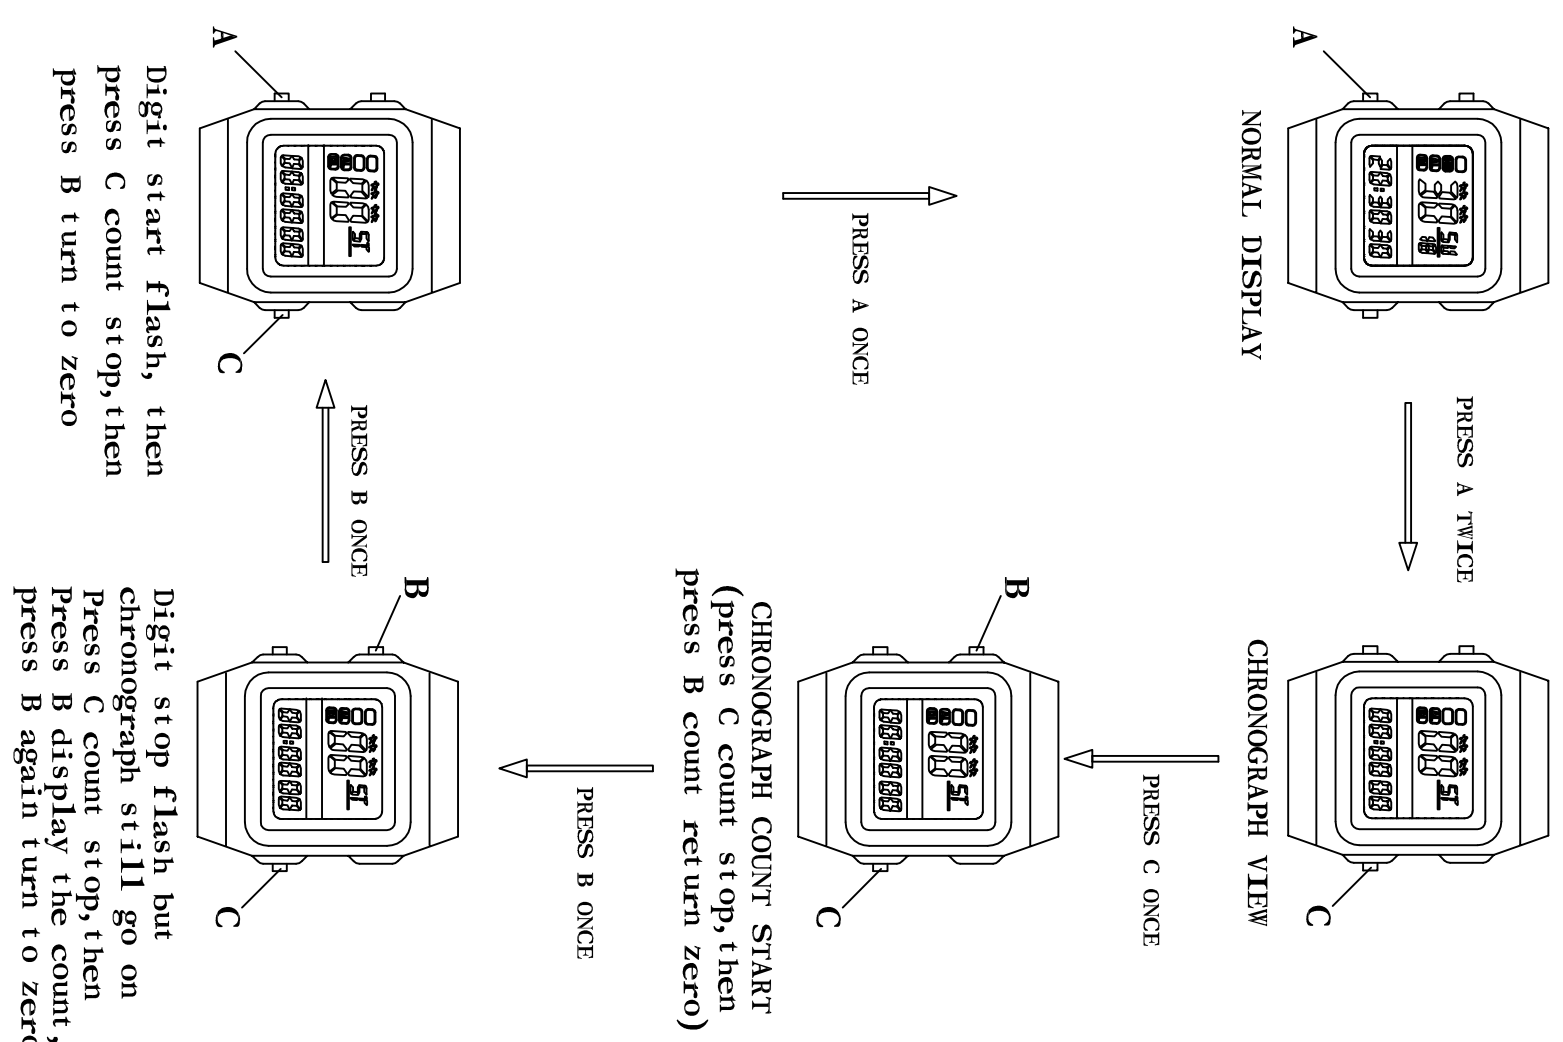

— (4) —

 HOW TO SET TIME, WEEK AND DATE

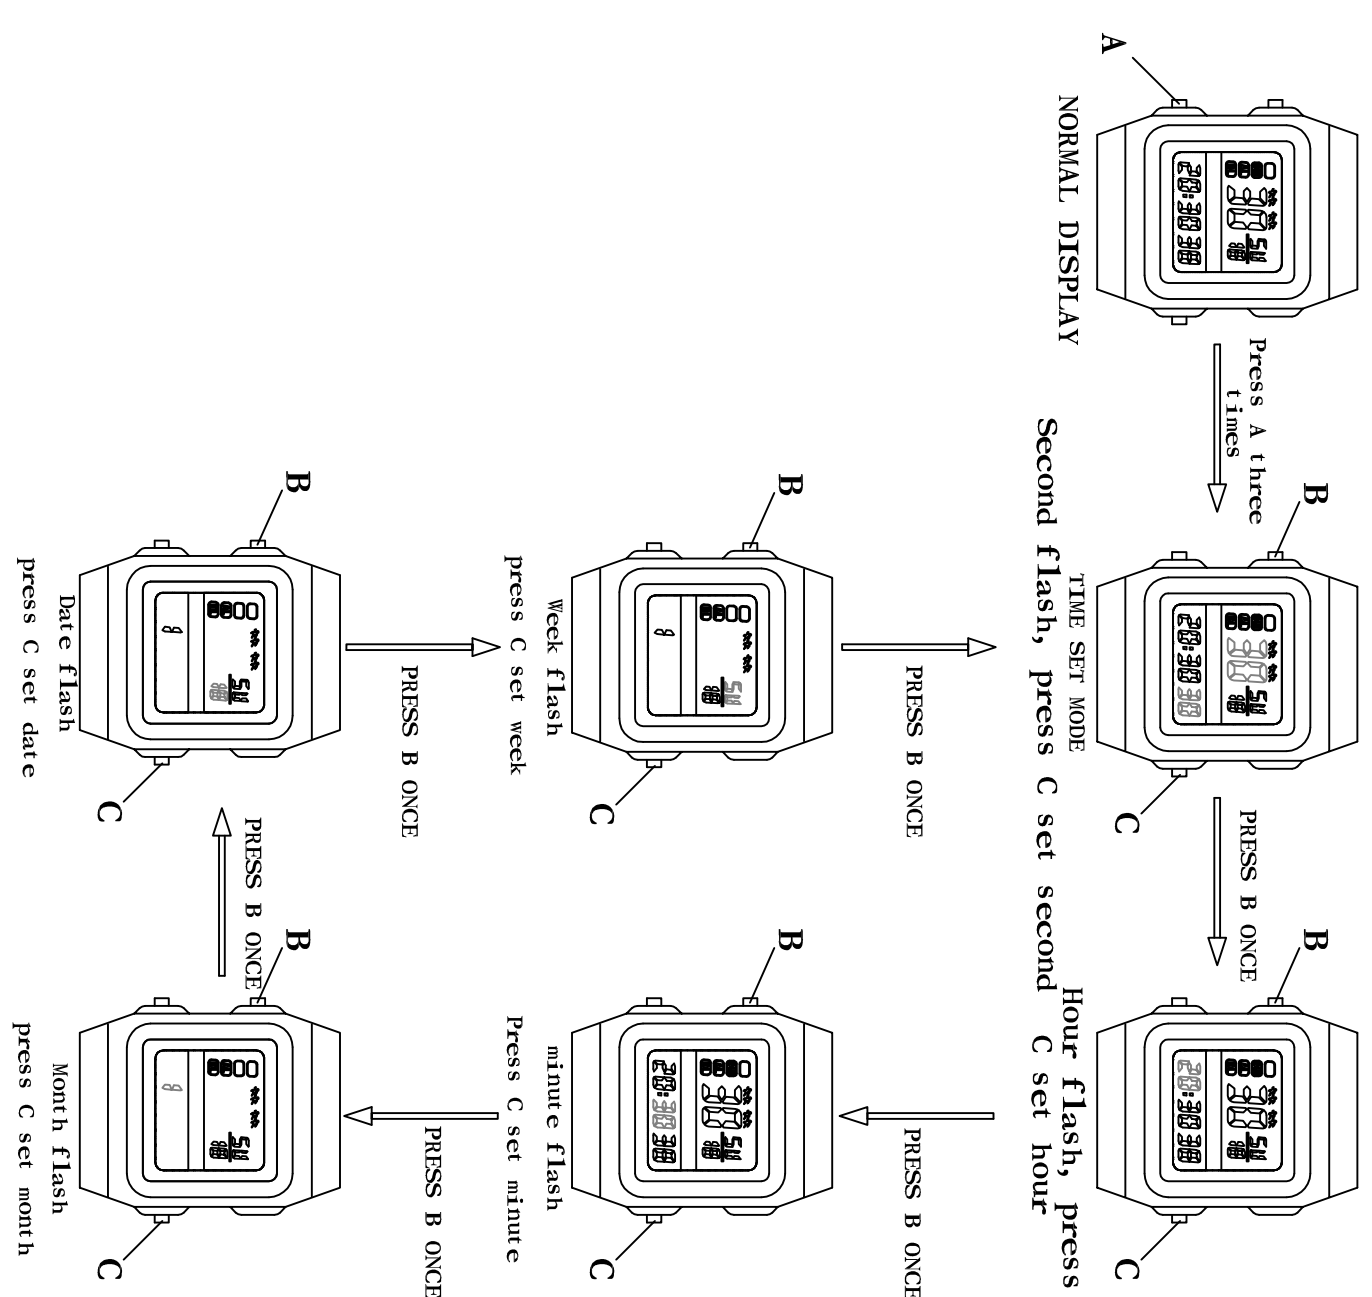

CAUTIONED

- As the company continues to optimize the product, and continue to improve the product, the product may be slightly adjusted or changed without notice.
- On the use of this product may cause a third party for any losses and any compensation, the company no responsibility.

MANUFACTURER: JINRONG TECHNOLOGY CO., LTD.
ADDRESS: JINRONG SCIENCE PARK, NO. 15, SHENYUAN, GUANGDONG, CHINA
TEL: 0086-0755-29563363 FAX: 0086-0755-29563363
http://jywjirong.cn.alibaba.com/

— (5) —